



Canon EOS 300 Top Panel Replacement

The top panel of the camera will be removed.

Written By: Tammy Kong



INTRODUCTION


Taking off the top of the camera allows repair access to the eye piece and command dial.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Batteries

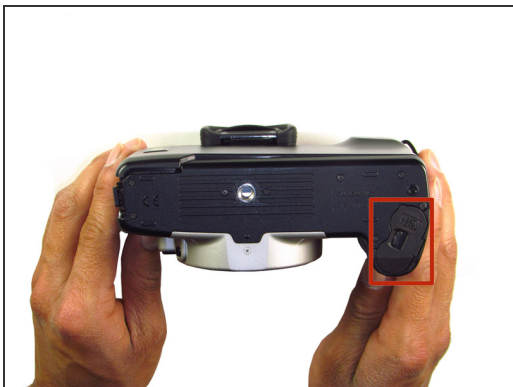


- Open up the battery door.

Step 2



- Remove the batteries from the camera by sliding them out into your palm.

Step 3 — Side Panel with Lever

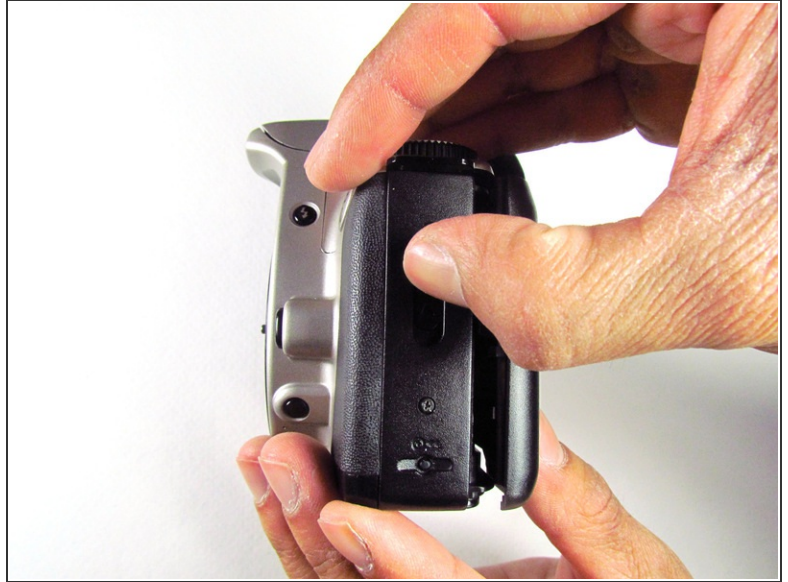


- Release the side latch to open the back panel.

Step 4



- Remove the two black 4.5mm screws above and below the latch.

Step 5

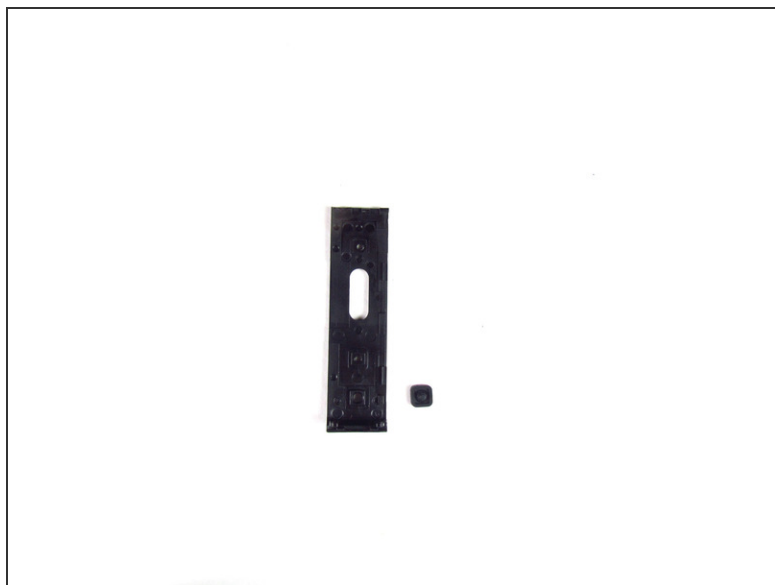

- Using your finger, carefully pry open the side panel from the top of camera.
- Pull panel downwards to remove.
- ⓘ Make sure to keep track of the small black piece of rubber under the latch.

Step 6 — Front Panel



- Remove the two silver 6mm Phillips #1 screws.

Step 7



- Flip camera over to the bottom.
- Remove the one 5mm Phillips #1 silver screw.

Step 8





- Remove the front panel by pulling away from the side with the lever.

Step 9 — Bottom Panel



- Remove three black 7.3mm Phillips #1 screws located on the corners of the camera.
- Remove five black 4.8mm Phillips #1 screws.

Step 10

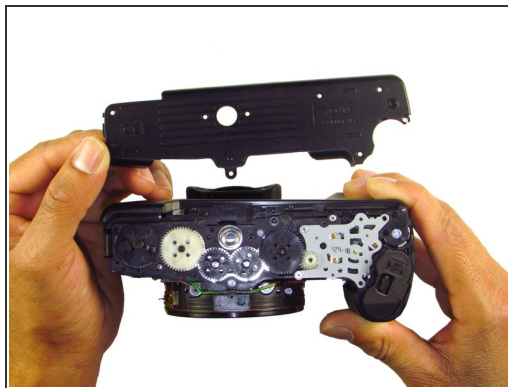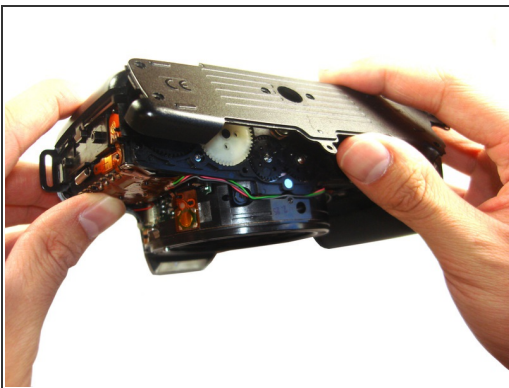

- Simply remove the bottom panel by prying it off with your finger.
- ⚠ When removing the panel, be sure the bottom of the camera is facing upright. There are loose gears that may fall out.
- Be wary of a loose piece of foam attached to the bottom panel.

Step 11 — Side Panel with Grip



- Remove the remote control socket cover.

Step 12




- Remove two black 4.5mm Phillips #1 screws.

Step 13



- Remove two black 4.8mm Phillips #1 screws on the front of the camera.

Step 14

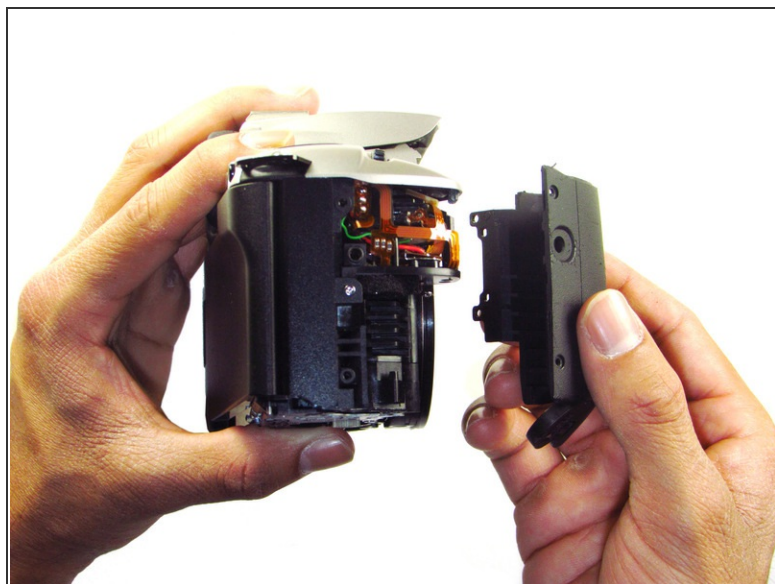


- Pry open the side grip using a spudger.

Step 15 — Eyecup




- With your hands, remove the rubber grip from the eye piece.

Step 16

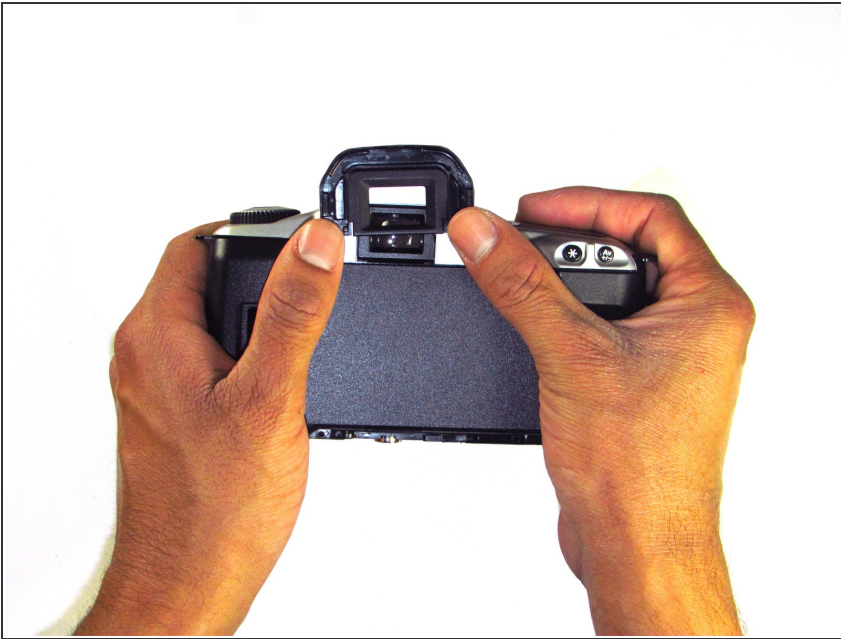

- Remove the eyecup from the eyepiece by pushing the eyecup up.

Step 17 — Top Panel

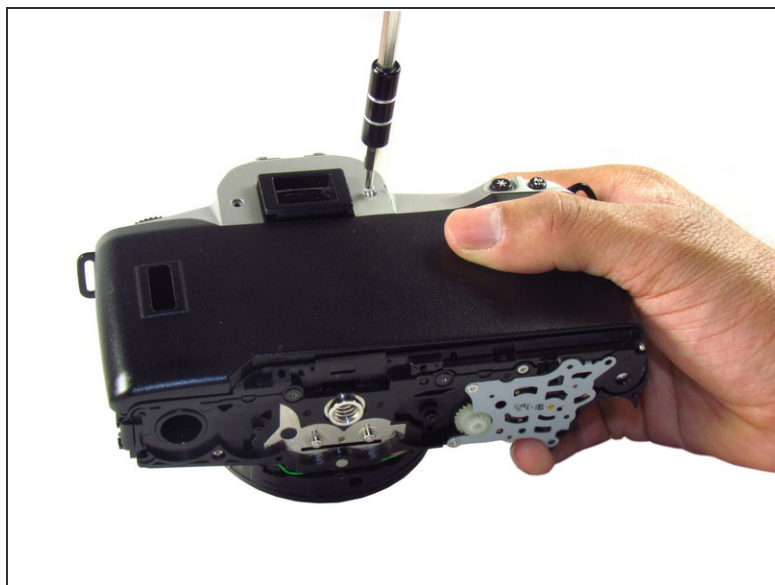


- Remove two silver 5.0mm Phillips #1 screws.

Step 18




- Remove the silver 5.5mm Phillips #1 screw.

Step 19

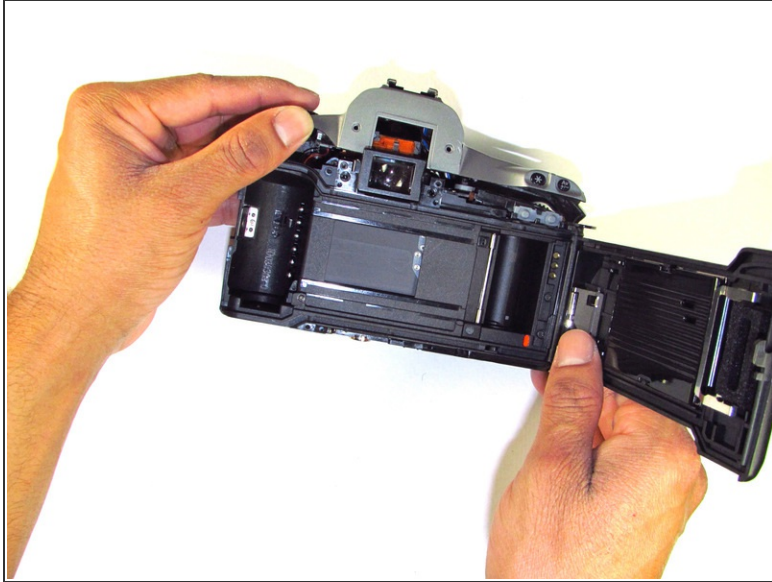

- Pry the top silver part of the camera off.

 Buttons may slip out of the camera's top as the top is pulled off the camera (shown in picture two).

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 12:43:09 AM.